

# Quickstart




The IoT workshop offers a fully configured Arduino environment for the Octopus board.

## 1. Download the current zip file of the workshop platform

<https://seafile.rlp.net/f/bb6bdbfe28034cd4861a/>

and unpack it on your own computer (Windows 7/8/10). Choose a short directory path, e.g. c:\IoTW\...

## 2. Connect the PC and Octopus board with the USB cable.

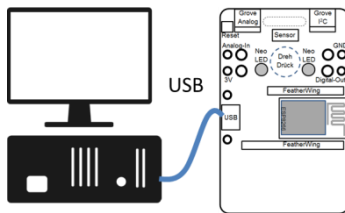


The operating system of the PC should automatically recognize the USB interface and assign a virtual COM port. We remember the number of the COM port. If we missed the Windows message, we can identify the port in the device manager under Connections as Silicon Labs CP210x.<sup>1</sup>




## 3. Start Arduino environment (double kick on c:\IoTW\IoT-Werkstatt.bat)

Change Language (“Datei”->“Voreinstellung”->“Editor-Sprache“) to english.

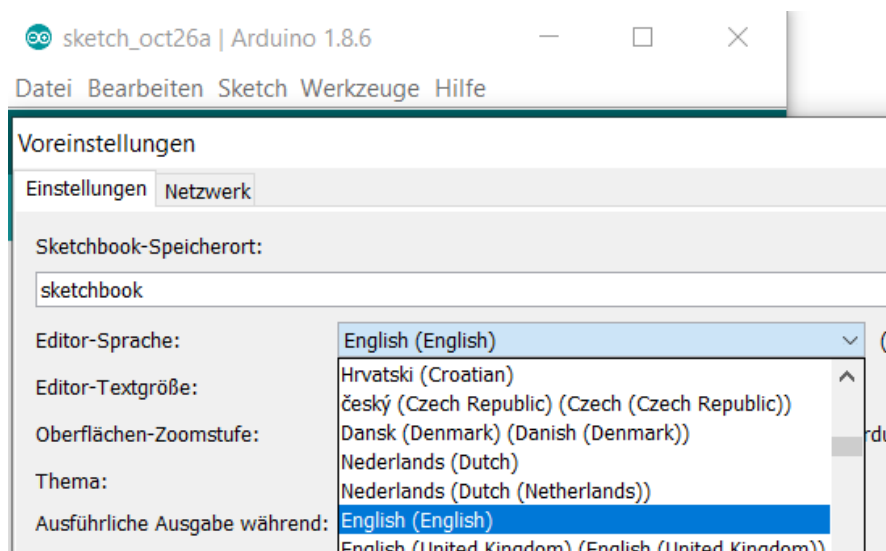

<sup>1</sup> In rare cases the Silicon Labs driver has to be installed manually. The necessary driver libraries can be found at <https://www.silabs.com/products/mcu/Pages/USBtoUARTBridgeVCPDrivers.aspx>

4. **Restart Arduino environment (double kick on c:\IoTW\IoT-Werkstatt.bat)** and select the COM port there under "Tools" -> "Port".
5. **Start IoT Ardublock ("Tools"->"Ardublock")** and enter the first small program. The neopixel symbol can be found on the left side under Display/Actuators.

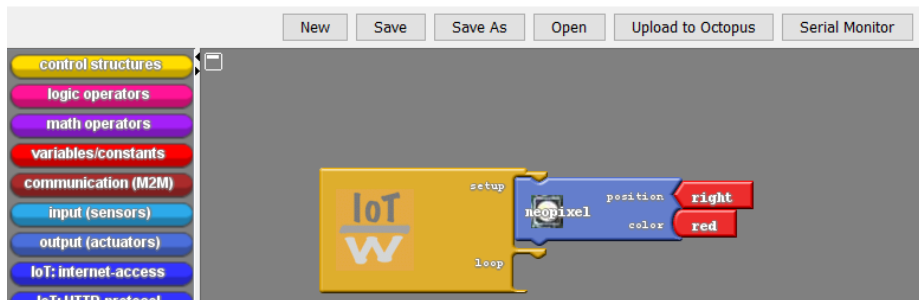

6. **Transfer the program via "Upload to Arduino" to the Octopus.**  
Our neopixel glows red.

More Info: [iotwerkstatt.umwelt-campus.de](http://iotwerkstatt.umwelt-campus.de)